



ReadyNAS 600, X6 and 1000S use standard ATX power connector

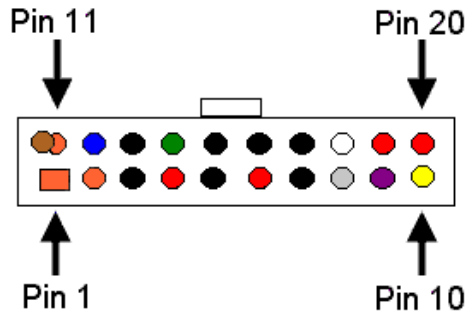

Pin	Signal	Color
1	+3.3V	Orange
2	+3.3V	Orange
3	GND	Black
4	+5V	Red
5	GND	Black
6	+5V	Red
7	GND	Black
8	PWR-OK	Gray
9	+5V AUX	Purple
10	+12V	Yellow
11	+3.3V +3.3V Sense	Orange Brown
12	-12V	Blue
13	GND	Black
14	PS-ON	Green
15	GND	Black
16	GND	Black
17	GND	Black
18	-5V	White
19	+5V	Red
20	+5V	Red

ReadyNAS NV, NV+ and 1100 use modified ATX power connector:  
-12V(Blue) and -5V(White) changed to +12V(Yellow)

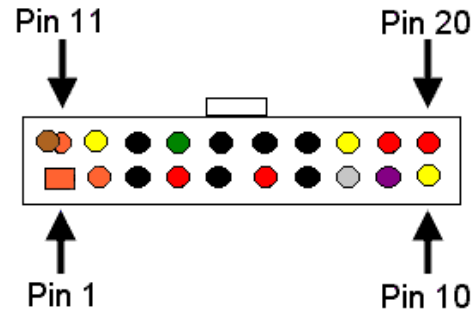

Pin	Signal	Color
1	+3.3V	Orange
2	+3.3V	Orange
3	GND	Black
4	+5V	Red
5	GND	Black
6	+5V	Red
7	GND	Black
8	PWR-OK	Gray
9	+5V AUX	Purple
10	+12V	Yellow
11	+3.3V +3.3V Sense	Orange Brown
12	+12V	Yellow
13	GND	Black
14	PS-ON	Green
15	GND	Black
16	GND	Black
17	GND	Black
18	+12V	Yellow
19	+5V	Red
20	+5V	Red