

Steps of Replacing the SODIMM


*Please use only qualified SODIMM memory. Check the ReadyNAS Compatibility List first.



1. Taking off the 4 screws on the back as shown in the picture. (Rear view)



2. Sliding out the side panels. (Left-rear view)

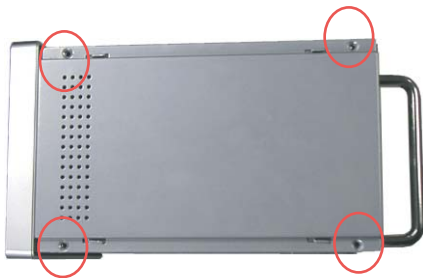

3. Release the 4 screws on the top. (Top view)



4. Taking off the top panel. (Top view)



5. Accessing the SODIMM module from the open slot. (Top view)

6. After replacing the memory, perform Step 1-4 in reverse order to re-assemble the unit.