


Manually Configuring the Leaf Networks Adapter


NETGEAR

February 2010


1. When launching ReadyNAS Remote for the first time after install you will see the following message if your Leaf Networks Adapter was not automatically configured correctly.

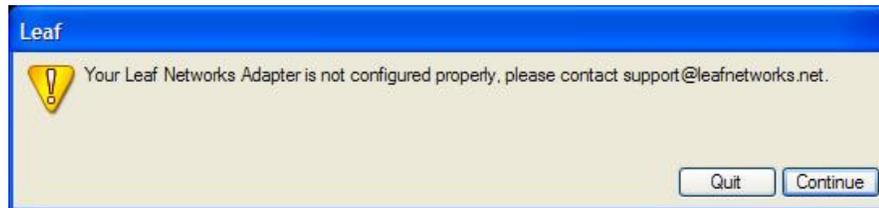


2. Open the Network Control Panel and view your network adapters. If the Leaf Networks Adapter is "unplugged" then it needs manual configuration.

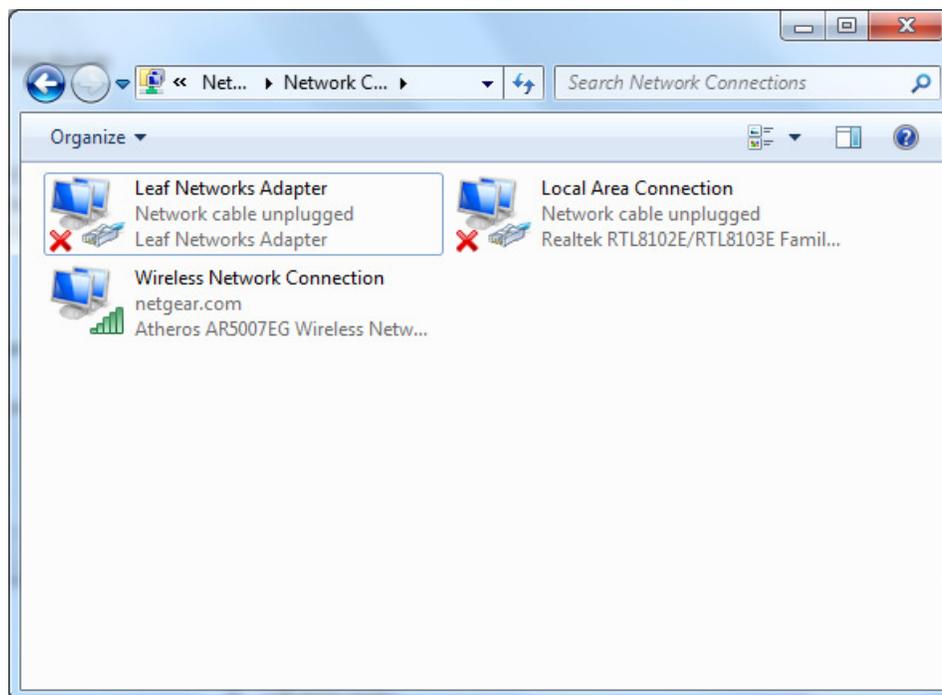


3. Open the Device Manager and expand the Networks Adapter.

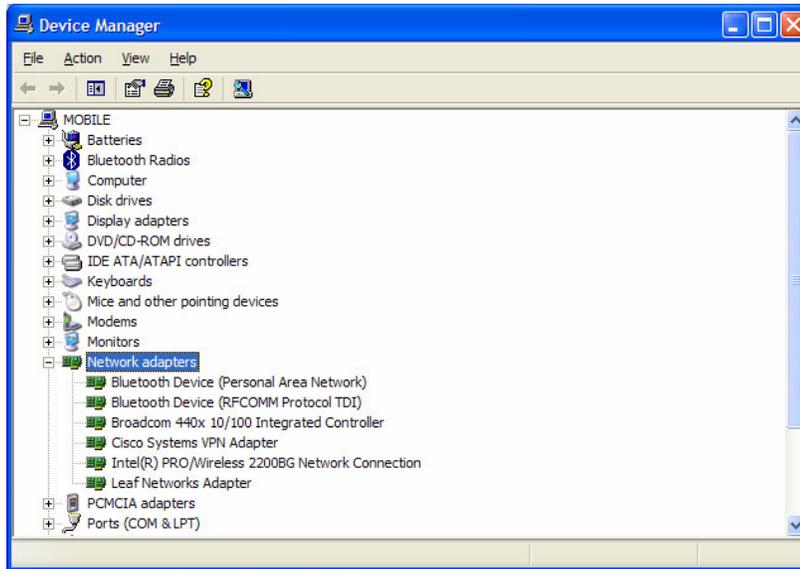


4. Double-click the Leaf Networks Adapter the Properties dialog and select the Advanced tab.

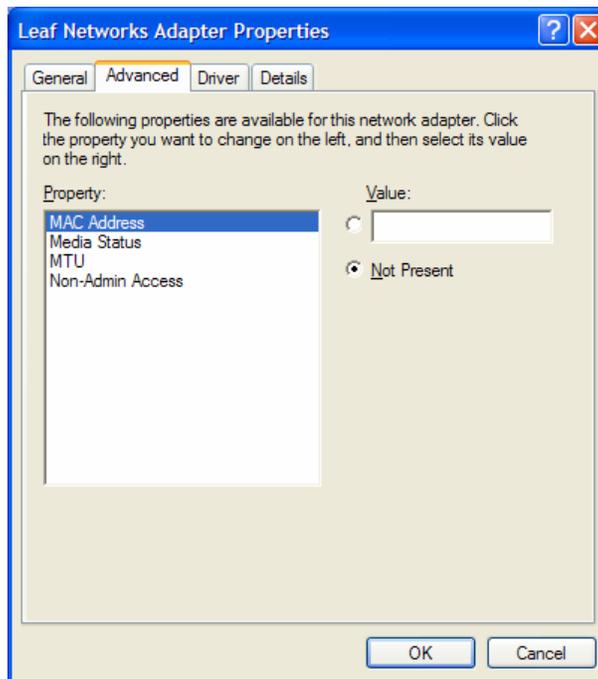


- From the Property list select Media Status and change the Value to Always Connected.

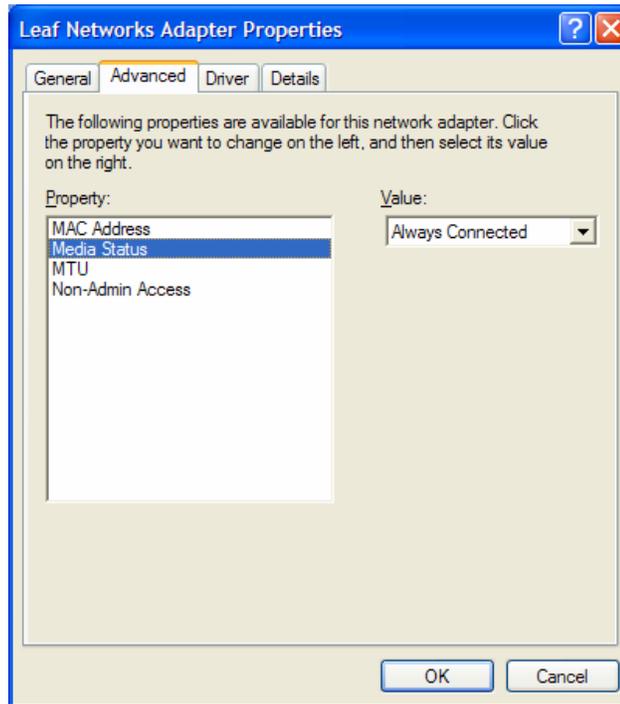

- Press OK and exit out of Device manager and press OK on System Properties dialog.
- Now from the Control Panel, select Network Connections.

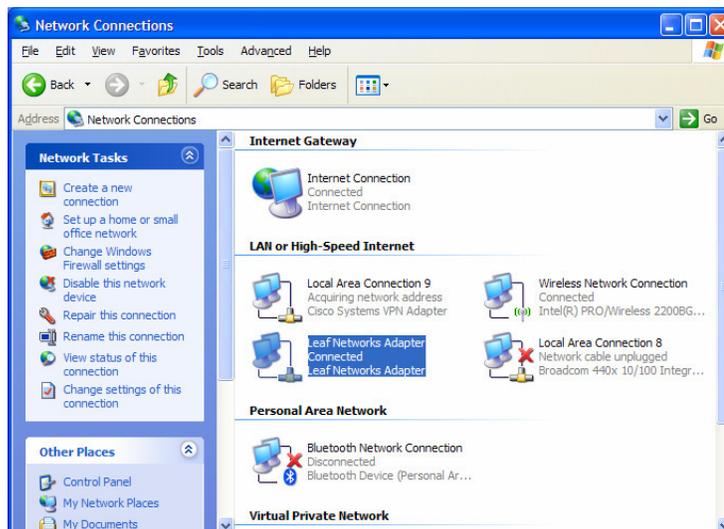

8. Right mouse click on the Leaf Networks Adapter (NOTE: The display name might say Local Area Connection 3) and select Properties and scroll down and select Internet Protocol (TCP/IP).

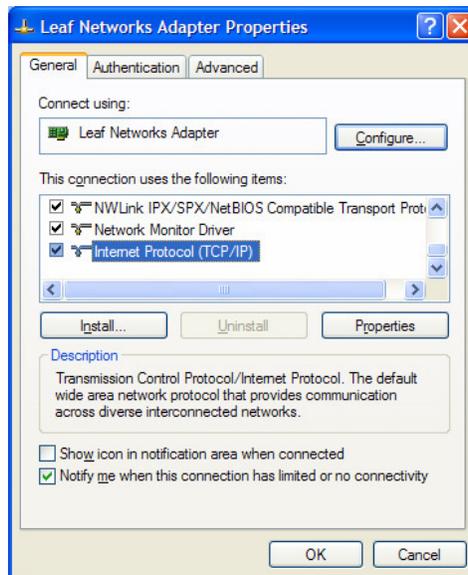

9. Select Properties button and select "Use the following IP address" and enter:
 - a. IP address: 5.0.0.3
 - b. Subnet mask: 255.0.0.0
 - c. Leave Default gateway empty
10. Select "Use the following DNS server addresses" and leave all fields empty.
11. Start Leaf, if you see same error message select "OK" then exit out of Leaf and try again.